Tankless Water Heater 3"/5" Concentric Direct Vent **Horizontal Vent Kit Installation Instructions**

This kit contains: Two Pipe to Concentric Appliance Adapter,

94 degree elbow, Horizontal Termination, Trim Plate, Hardware, and Installation Instructions.

NOTICE: Additional vent piping, up to a maximum of nine (9) feet max, can be purchased separately to extend the installation of this kit. The Sealed Combustion Horizontal Vent Kit (RTG20197) is designed for use with ONLY the following models:

RTGL74DV* PH-28R DVS* RTG-74DV* GT-199DV*

RUTG-74DV* RUTGL74DV* PH-28C DVS*

RMTGL74DV* RMTG-74DV* * P - suffix for LP Gas ECO200DV* PTG-74DV* * N - suffix for Natural Gas

It is very important that all persons who are expected to install, operate or adjust this vent system and/or water heater read these instructions along with those instructions provided with the tankless water heater.

This instruction will only cover the installation of the Metal-Fab, Inc., Sealed Combustion Horizontal Vent Kit to the tankless water heater. Refer to the Owner's Use and Care Manual provided with your Direct Vent Tankless Water Heater for additional installation considerations and directions.

Unpack the Horizontal Vent Kit. inspect all parts for damage, and make sure none of the parts are missing. Contact the supplier if there are parts missing.



WARNING: IMPROPER INSTALLATION OF VENTING, OR FAILURE TO FOLLOW ALL INSTALLATION INSTRUCTIONS COMPLETELY, CAN RESULT IN PROPERTY DAMAGE AND/OR DEATH.







Installation Location - After choosing the installation location for the water heater, see the Use and Care Manual provided with the tankless water heater for information and clearances, mount the water heater to the wall as instructed.

When cutting the hole, cover the vent of the water heater to prevent any debris from falling into the flue. Remove this cover prior to completing the installation

Measure up 16 inches from the top of the water heater and cut a 6-inch hole (recommended) through the wall, with a slight or 4-degree pitch down to the outside. See Figure 1.

Adapter Installation - Apply a light amount of silicone lubricant to the silicone seals to help the adapter fit on the water heater. Align the adapter with the concentric vent pipe and press it down until adapter bottoms out. See Figure 2. Attach adapter to the tankless water heater by tightening each of the two clamps on the four (4) inch vent connec-

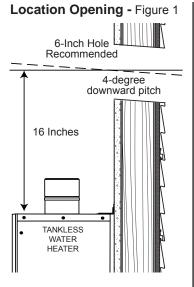

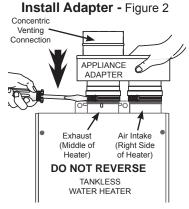

NOTICE: THIS ADAPTER MUST BE INSTALLED WITH THE TOP CONCENTRIC VENT OPENING DIRECTLY ABOVE THE CENTER VENT ON THE WATER HEATER, AS SHOWN IN FIGURE 2. IN-STALLATION OTHERWISE WILL CAUSE IMPROPER OPERATION OF THE WATER HEATER.



DO NOT ATTEMPT TO CUT THIS VENTING MATERIAL. **CUT SECTIONS WILL NOT SEAL AND COULD CAUSE** IMPROPER OPERATION OF THE WATER HEATER.

CONCENTRIC VENT JOINT ASSEMBLY


Connections between vent and fittings are male/female type. The inner duct is sealed with an integral seal gasket and the joint is mechanically secured via the overlapping outer wall of the double wall pipe.


Joints are assembled per the following steps:

Before assembly, observe that the seal gasket is located within the female inner pipe joint. Locate next pipe or fitting with male inner pipe joint and insert to begin engagement of inner pipe joint. To help the joints slide together, apply a light amount of silicone or water -based lubricant to the silicone seals.

- As the joint further engages, align the male and female ends of the outer wall of each pipe so that they begin to engage as the pipes are further pushed together.
- Pipe joint is fully engaged when the female end of the outer pipe comes in contact (or is at least within 1/16th inch) to the base of bead on the male end of the adjoining vent pipe.
- When possible look within the pipe assembly to verify that no sign of seal gasket is showing. Complete the joint assembly by securing the joint using #8 x 1/2" sheet metal screws (3 per joint) at each prepunched hole on the female end of each joint.


Joint Assembly - Figure 3

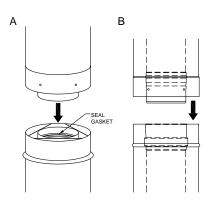

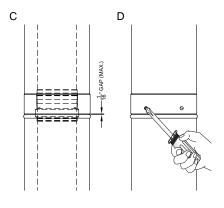

Horizontal Termination Installation – Attach the horizontal termination to the 94 degree elbow per the joint assembly instructions with a weep hole facing the bottom. Secure the termination to the elbow with the three screws provided. See Figure 4.


Install Horizontal Termination to Elbow - Figure 4

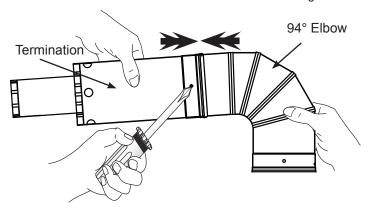


Horizontal Termination and Elbow Installation - Align the elbow and termination vent assembly through the hole in the wall. Align and press the elbow down onto the appliance adapter. Completely seat and secure the connection per the joint assembly instructions. A slight rotation of the joint may be necessary to line up the venting. The venting should be square and sealed at final assembly.

The weep holes around the outside of the termination must be at least 1 inch from the finished wall of the building. See Figure 5.

Trim Plate Installation - Attach the trim plate to the exterior wall and horizontal termination with hardware provided. Apply a bead of silicone sealant completely around the termination where it penetrates the trim plate and where the trim plate meets the wall to create a liquid tight assembly, which will prevent rain and snow entry into the wall construction. See Figure 7.

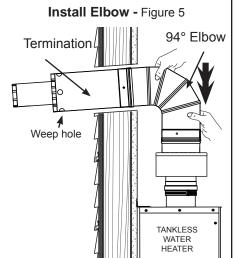




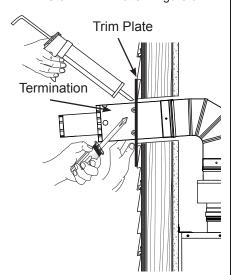

Clearance Considerations - The concentric vent piping and fittings are certified for a clearance of zero (0) inches to combustible surfaces.

Completed Vent Kit Installation

Installation is complete. Refer to Owner's Use and Care Manual provided with your Direct Vent Tankless Water Heater for initial operation checks to ensure proper operating conditions.

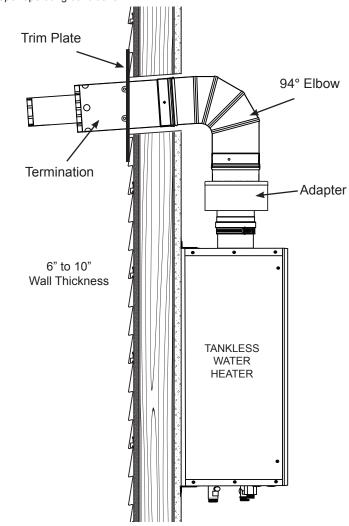

This kit can be extended up to a Maximum of nine (9) feet of vent pipe length **DO NOT USE MORE THAT NINE (9) FEET OF ADDITIONAL VENT PIPING WITH THIS KIT**. If more that nine (9) feet of vent pipe is used, it could result in the improper operation of the tankless water heater. NOTICE: If a vent length of more that two (2) feet straight up from the top of the water heater is needed, a condensate collector must be installed at the water heater.

Do not attempt to connect any other vent material from another manufacturer or brand to this vent kit. Do not attempt to extend the four (4) inch vent connections to the tankless water heater, this adapter must be securely and directly attached to the tankless water heater.

The material used in this vent kit has been approved by the water heater manufacturer.



DO NOT ATTEMPT TO USE ANY VENTING BY ANOTHER MANUFACTURER WITH THIS VENT KIT.

If you need service refer to these instructions and the instruction manual that came with the water heater for additional information. Should you have any questions about your new water heater or vent kit, or if these require adjustment, repair, or routine maintenance, it is suggested that you first contact your installer, plumbing contractor or previously agreed upon service agency. In the event the firm has moved, or is unavailable, refer to the telephone directory, commercial listings or local utility for qualified service assistance. Should your problem not be solved to your complete satisfaction, you should then contact the Manufacturer's National Service Department. Refer to the section titled "IF YOU NEED SERVICE" in the Use and Care Manual provided with your water heater(s) for contact information and procedures.