
NEW PREMIUM BIOMASS

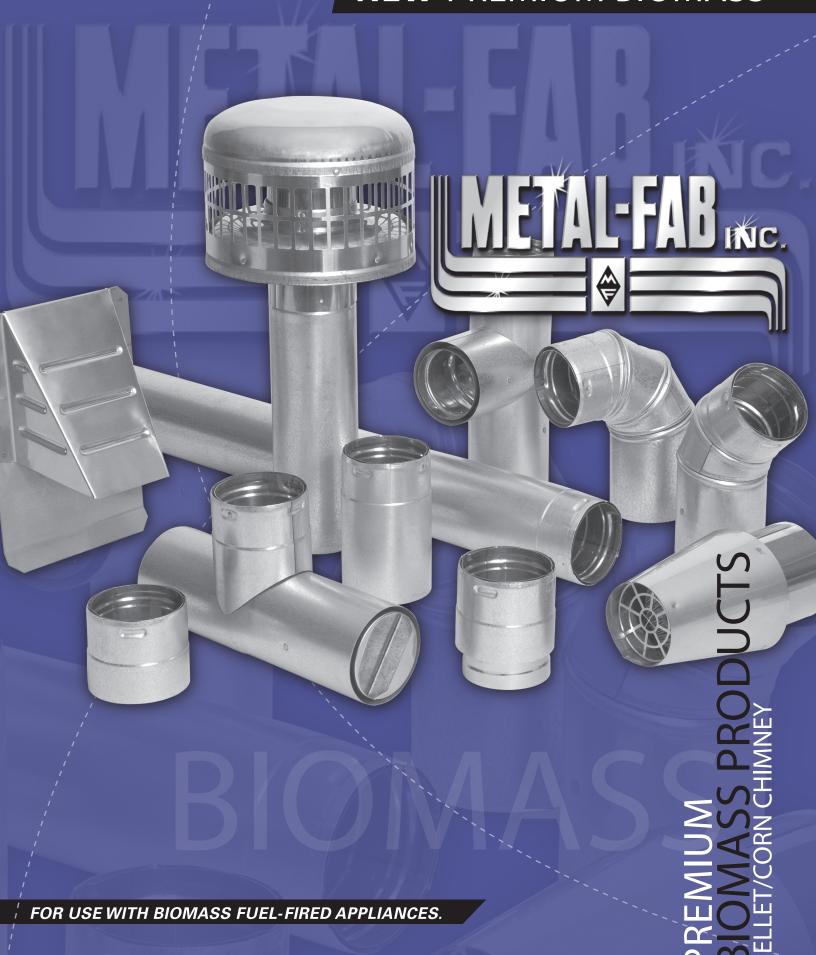



Type L Biomass Chimney


For use with biomass fuels such as pellet, corn, wheat or other grassy and woody plants as specified by appliance manufacturers.

- Tested and Listed to UL641
- Pipe and fittings in 3" and 4" diameters.
- Factory-built double wall construction, using 444 stainless steel flue and galvanized steel outer casing.
- Continuous laser-welded inner flue and casing.
- 1" clearance to combustibles vent system, rated for continuous use of flue temperatures up to 570°.
- Silicone gaskets provide airtight seal eliminating fly ash leakage.

• Innovative twist-locking connections rotate 130° allowing seam alignment for an aesthetically pleasing installation.

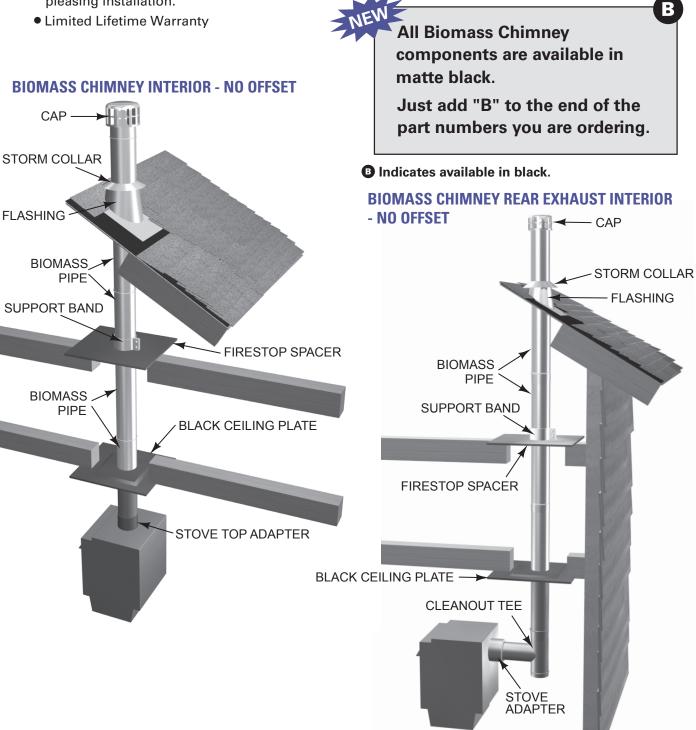

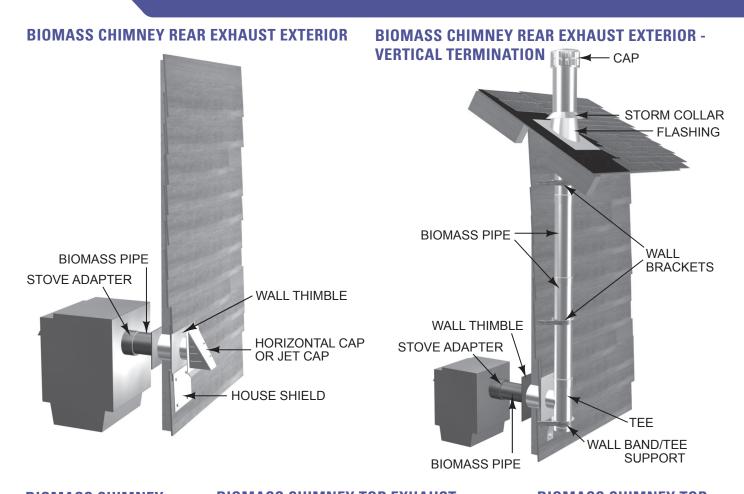

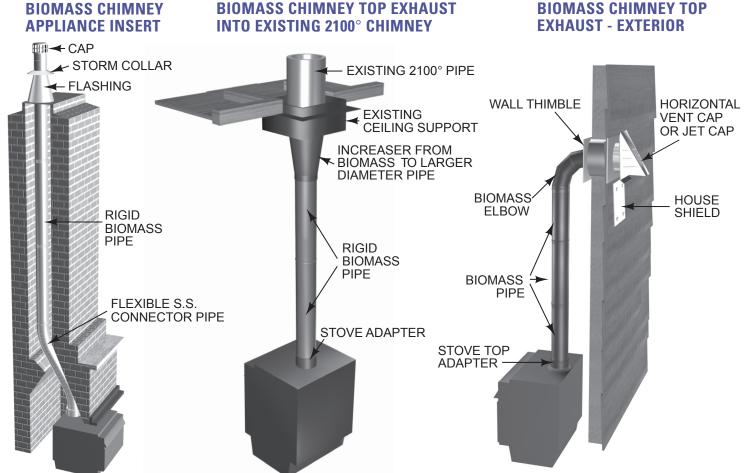


RIGID PIPE LENGTHS – B48, B36, B24, B12, B6



444 stainless steel liner. Galvanized casing. 1" clearance to combustibles.

DIA.	OD	6"	12"	24"	36"	48"
3"	3.5"	X	Х	Х	X	Х
4"	4.5"	Х	X	Х	Х	Х




Note: Pipe overlaps 1½" when joined together. Assembled length is 11/2" less than listed length.

ADJUSTABLE LENGTH PIPE – B12A


Adjustable length B12A is used when fixed pipe lengths are inappropriate. Adjustable from 4" to 8".





S.S FLEXIBLE CONNECTOR* – BFXC

*Contact Factory For Availability

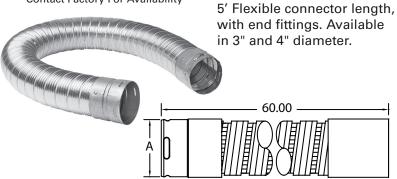

25' S.S. FLEX COIL - PFLX

3" and 4" diameter x 25' coils of special hi-temperature and acid resistant 316 stainless steel. Easily handled. Very flexible.


3" to 4" INCREASER - 3BI4





Provides transition from 3" to 4" diameter pipe

MALE FLEX ADAPTER – B4A

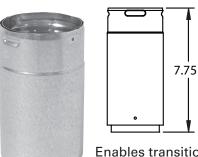


Enables transition from flex to rigid pipe.

FEMALE FLEX ADAPTER –B4FA



STOVE ADAPTER - UNIVERSAL - BSAU




from appliance or rigid pipe to flex pipe.

STOVE ADAPTER - STANDARD - BSA




Use as a connector between stove exhaust collar and the positive twist lock of biomass chimney pipe. Order BSA when O.D. of exhaust collar is a true 3" or 4" dimension. Order BSAU when collar is less than 3" or 4" diameter.

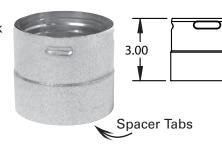

45° ELBOW – B45L



SIZE	Α	В	С	D
3"	4.44	3.63	4.63	12.75
4"	4.75	3.88	5.00	13.63

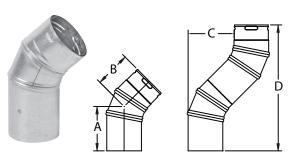


90° ELBOW – B901

CL	DU	VV	_	D	J	
B	0	175			۸	


SIZE	Α	В	С	D
3"	4.44	3.63	4.63	12.75
4"	4.75	3.88	5.00	13.63



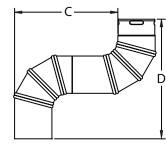

REDUCED TAP TEE W/PULL-OFF CAP – 4BT3




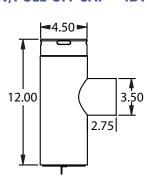

Use tee to transition from horizontal to vertical inside or to an exterior chimney that is mounted to a tee support.

REDUCED TAP TEE W/ADAPTER – 4BT3A




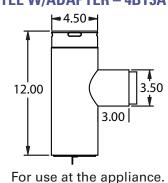

For use at the appliance Extended flue at tap fits stove outlet.

HORIZONTAL CLEANOUT TEE W/TWIST-OFF TEE CAP – BCT




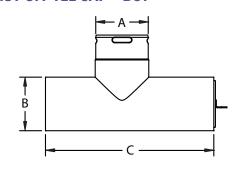

SIZE	А	В	С
3"	3.50	3.50	11.00
4"	4.50	4.50	12.00

VERTICAL CLEANOUT TEE W/TWIST OFF TEE CAP – BVCT





SIZE	А	В	С
3"	3.50	3.50	11.00
4"	4.50	4.50	12.00


TWIST-OFF TEE CAP - BCTC

8




This part number applies when tee cap is sold separately.

COMBINATION WALL BAND/TEE SUPPORT – PWBS

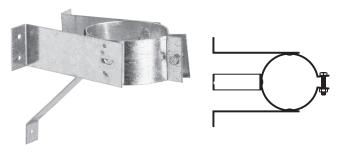


Provides exterior, vertical/lateral support for chimney. Maximum height of chimney which can be supported is 30 feet.

SUPPORT ADJUSTMENT KIT – PWAS

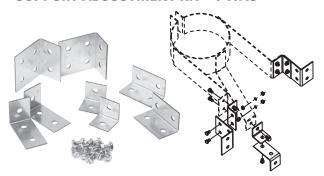


Enables adjustment of standard wall support (PWBS) from minimum 3" to maximum 5".

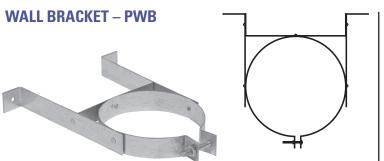

Used to provide lateral support while maintaining proper clearance. Recommended spacing is 6 ft. between bands above the starting point.


WALL BRACKET ADJUSTMENT KIT – PWBA

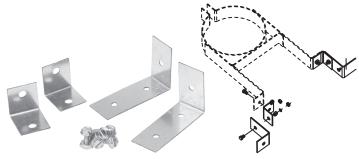

Enables adjustment of standard wall bracket (PWB) from minimum 3" to maximum 5".

WALL THIMBLE – PWT



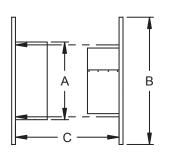


SIZE	А	В	С
3"	6.12	10.13	5.00 TO 9.50
4"	7.12	10.13	5.00 TO 9.50

Provides the proper clearance for the pellet/corn pipe when it passes through a combustible wall.

HOUSE SHIELD - PHS




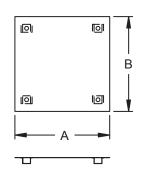

SIZE	А	В
3"	12.00	18.00
4"	12.00	18.00

Used in horizontal vent applications to provide additional protection from discharge.


ROOF SUPPORT – PRS

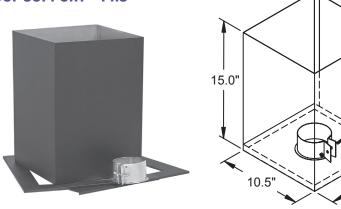

For use on open beamed pitched roofs or ceilings. Includes trim pieces for finishing out installation. Also includes support band.

BLACK CEILING PLATE – PCP




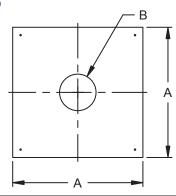

SIZE	А	В
3"	17.50	3.63
4"	17.50	4.63

10.5"

Used as an exposed surface trim piece where biomass chimney passes through a floor or ceiling.

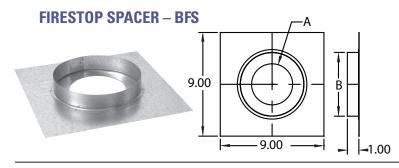


SIZE	А	В
3"	3.56	5.50
4"	4.56	6.50

Provides proper clearance where biomass chimney passes through a floor or the ceiling. Serves as a support plate for the support band (sold separately).

SUPPORT BAND - PSB




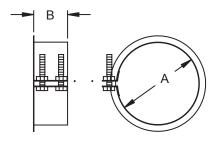

SIZE	А	В
3"	3.56	1.50
4"	4.56	1.50

Used to support the biomass chimney as it passes through the firestop spacer or roof support. This piece typically sits on top of the firestop spacer or inside the roof support.


STANDARD FLASHING - PF

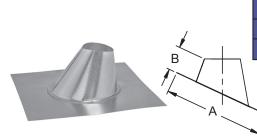

SIZE	Α	В
3"	17.00	6.00
4"	17.00	6.00

Fits roof pitches from 2/12 to 5/12


HIGH PITCH FLASHING - PF12



SIZE	Α	В	С
3"	19.50	3.50	4.00
4"	22.50	4.50	5.75

Fits roof pitches from 6/12 to 12/12.

TALL CONE FLASHING – PFT

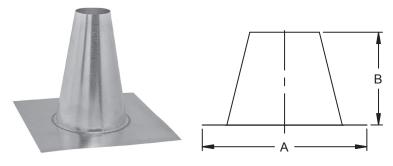



SIZE	А	В
3"	15.00	11.75
4"	15.00	11.75

Fits roof pitches from 0/12 to 2/12

STORM COLLAR – PSC



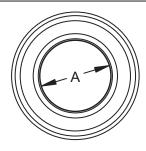




SIZE	Α	В	С
3"	3.53	1.13	6.25
4"	4.53	1.13	7.25

Used in combination with the flashing to ensure water-tight installation. Slips around pipe above the flashing.

VERTICAL VENT CAP – BRC



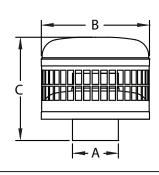


SIZE	А	В	С
3"	3.50	8.25	7.88
4"	4.50	8.25	7.88

Stainless steel cap guards against rain, snow, and down drafts. Helps provide proper venting action. Attractive design enhances appearance.

HORIZONTAL VENT CAP – BHC



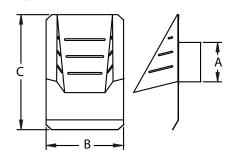


SIZE	Α	В	С
3"	3.50	7.00	10.00
4"	4.50	7.00	10.00

Stainless steel cap with birdscreen prevents entrance of pests and rain, and directs flue gasses away from dwelling.

HORIZONTAL JET CAP – BJC





SIZE	А	В	С
3"	3.50	5.25	3.00
4"	4.50	5.25	3.00

Jet cap directs flue gas away from dwelling.



800-835-2830